

FM2100 User Manual

v1.8

Contents

1	INTRODUCTION.....	4
1.1	ATTENTION	4
1.2	INSTRUCTIONS OF SAFETY	4
1.3	LEGAL NOTICE	5
1.4	ABOUT DOCUMENT	5
2	BASIC DESCRIPTION	6
2.1	PACKAGE CONTENTS	6
2.2	BASIC CHARACTERISTICS	6
2.3	MECHANICAL FEATURES	7
3	CONNECTION, PINOUT, ACCESSORIES.....	9
3.1	SIM CARD INSERT SCHEME	9
3.2	NAVIGATE LED.....	9
3.3	MODEM LED	10
3.4	STATUS LED.....	10
3.5	SOCKET 2×3.....	10
3.6	PORT 1/NMEA.....	11
3.7	ACCESSORIES	12
4	OPERATIONAL BASICS	14
4.1	OPERATIONAL PRINCIPALS	14
4.2	SLEEP MODE	14
4.3	VIRTUAL ODOMETER	14
5	CONFIGURATION.....	15
5.1	CONFIGURATOR.....	15
5.2	GLOBAL PARAMETERS.....	16
5.3	SYSTEM SETTINGS.....	16
5.4	GPS SETTINGS.....	16
5.5	GEOFENCE SETTINGS.....	18
5.6	GSM SETTINGS.....	19
5.7	GPRS SETTINGS.....	20
5.8	SMS SETTINGS.....	21
5.9	SEND PARAMETER SETTINGS	21
5.10	I/O SETTINGS.....	22
5.10.1	<i>Monitoring.....</i>	<i>24</i>
5.10.2	<i>Event Generating.....</i>	<i>24</i>
6	SMS COMMAND LIST.....	25
6.1	SMS SETTINGS FOR FM2	25
6.2	SMS COMMAND LIST	25
6.2.1	<i>getstatus</i>	<i>26</i>
6.2.2	<i>getweektime.....</i>	<i>27</i>
6.2.3	<i>getops</i>	<i>27</i>
6.2.4	<i>getcftime.....</i>	<i>27</i>
6.2.5	<i>getgps</i>	<i>27</i>
6.2.6	<i>getver.....</i>	<i>27</i>
6.2.7	<i>getinfo</i>	<i>28</i>
6.2.8	<i>getio</i>	<i>28</i>
6.2.9	<i>radio #.....</i>	<i>28</i>
6.2.10	<i>setdigout ##.....</i>	<i>28</i>
6.2.11	<i>getparam #####.....</i>	<i>29</i>
6.2.12	<i>setparam ##### #.....</i>	<i>29</i>
6.2.13	<i>flush #,#,#,#,#,#.....</i>	<i>29</i>
7	DEBUG MODE	30
8	PARAMETER LIST	31
8.1	GLOBAL PARAMETERS.....	31
8.1.1	<i>Record search (ID 105).....</i>	<i>31</i>

8.2	DATA ACQUISITION AND SENDING PARAMETERS	31
8.2.1	Time based acquire interval (ID=11)	31
8.2.2	Distance based acquire interval (ID=12).....	31
8.2.3	Angle based coordinate acquisition (ID=13)	31
8.2.4	Data Send interval (ID=270)	31
8.2.5	Minimum records number in packet (ID=232).....	32
8.2.6	GPRS Enable (ID=240).....	32
8.2.7	GSM Operator list (ID=271).....	32
8.2.8	GPRS Data send week time schedule (ID=272)	32
8.2.9	SMS Data send week time schedule (ID=273).....	33
8.2.10	SMS Data send allow (ID=250).....	33
8.2.11	24 Records time step (ID=274).....	33
8.3	SECURITY SETTINGS AND PARAMETERS	34
8.3.1	SMS User login (ID=252).....	34
8.3.2	SMS User password (ID=253).....	34
8.3.3	Server Number (ID=260).....	34
8.3.4	Authorized Number #1 (ID=261)	34
8.4	GPRS ACCESS AND ADDRESS SETTINGS	34
8.4.1	APN Name (ID=242).....	34
8.4.2	APN username (ID=243).....	35
8.4.3	APN Password (ID=244).....	35
8.4.4	Data send protocol (ID=231)	35
8.4.5	Server IP address (ID=245).....	35
8.4.6	Server port number (ID=246).....	35
8.5	GEOFENCE ZONES SETTINGS AND PARAMETERS	35
8.5.1	GeoFence border width (ID=20).....	35
8.5.2	GeoFence Zone #1 Configuration Parameter (ID=30).....	36
8.5.3	GeoFence x1 (ID=31).....	36
8.5.4	GeoFence y1 (ID=32)	36
8.5.5	GeoFence x2 (ID=33).....	37
8.5.6	GeoFence y2 (ID=34)	37
8.5.7	All the rest zones	37
8.6	SYSTEM PARAMETERS.....	37
8.6.1	Device Power mode (ID=0).....	37
8.6.2	GPS Enable (ID=10).....	37
8.7	IO PROPERTIES.....	38
8.7.1	IO#1 property parameter (ID=300)	38
8.7.2	IO#1 priority (ID=301).....	38
8.7.3	IO#1 High level (ID=302)	38
8.7.4	IO#1 Low level (ID=303)	39
8.7.5	IO#1 logic operand (ID=304)	39
8.7.6	IO#1 averaging length (ID=305).....	39
9	MOUNTING RECOMMENDATIONS	41
9.1	CONNECTING WIRES	41
9.2	CONNECTING POWER SOURCE.....	41
9.3	CONNECTING IGNITION WIRE	41
9.4	CONNECTING GROUND WIRE.....	41
9.5	CONNECTING ANTENNAS	41
9.6	MODULE INSTALLATION.....	42
10	CHANGE LOG	43

1 INTRODUCTION

1.1 Attention



Do not disassemble the device. Do not touch before unplugging the power supply if the device is damaged, the power supply cables are not isolated or the isolation is damaged.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device may be connected only by qualified individuals.



The device must be firmly fastened in the predefined location.




The programming must be performed using a second class PC (with autonomic power supply).



The device is susceptible to water and humidity.



Warning!! May explode, if a wrong accumulator is used.

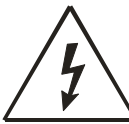

Any installation and/or handling during a lightning storm is prohibited.



FM2100 has not USB interface; it has Mini USB connector type with physical RS232 interface.

Do not plug it to PC's USB port.

Please use cables provided with FM2100 device.

Teltonika is not responsible for any harm caused by using wrong cables for PC <-> FM2100 connection.

1.2 Instructions of safety

This chapter contains information on how to operate FM2 safely. By following these requirements and recommendations you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!


The device uses a 10V...30V DC power supply. The nominal voltage is 24V DC. The allowed range of voltage is 10V...30V DC, power – not more than 12 W.

To avoid mechanical damage, it is advised to transport the FM2 device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible, which show the status of operation the device is in.

When connecting the connection (2x3) cables to the vehicle, the appropriate jumpers of the power supply of the vehicle should be disconnected.

Before dismounting the device from the vehicle, the (2x3) connection must be disconnected.

The device is designed to mount in a zone of limited access, which is inaccessible for the operator. All related devices must meet the requirements of standard EN 60950-1. The device FM2 is not designed as a navigational device for boats.



FM2100 has not USB interface; it has Mini USB connector type with physical RS232 interface.

Do not plug it to PC's USB port. Please use cables provided with FM2100 device.

Teltonika is not responsible for any harm caused by using wrong cables for PC <-> FM2100 connection.

1.3 Legal Notice

Copyright © 2008 Teltonika. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Teltonika is prohibited.

Other products and company names mentioned here in may be trademarks or trade names of their respective owners.

1.4 About document

This document contains information about the architecture, possibilities, mechanical characteristics, and configuration of the FM2100 device.

Acronyms and terms used in document

- PC – Personal Computer.
- GPRS – General Packet Radio Service.
- GPS – Global Positioning System.
- GSM – Global System for Mobile Communications.
- SMS – Short Message Service.
- AC/DC – Alternating Current/Direct Current.
- Record – AVL data stored in FM2100 memory. AVL data contains GPS and I/O information
- AVL packet - Data packet which is being sent to server during data transmission. AVL packet contains from 1 to 30 records.

2 BASIC DESCRIPTION

FM2100 is a terminal with GPS and GSM connectivity, which is able to determine the object's coordinates and transfer them via the GSM network. This device is perfectly suitable for applications where location acquirement of remote objects is needed. It is important to mention that FM2100 has additional inputs and outputs, which let you control and monitor other devices on remote objects. It also has a RS232 port for NMEA output and configuration (also it could be used for peripheral devices communication with special firmware).

2.1 Package contents

The FM2100 device is supplied to the customer in a cardboard box containing all the equipment that is necessary for operation. The package contains:

- The FM2100 device.
- Input and output power supply cable with a 2x3 connection.
- GPS antenna (only with FM2100E).
- Port and GPS cables

2.2 Basic characteristics

GSM / GPRS features:

- Teltonika TM2 quad band module (850, 900, 1800, 1900 MHz)
- GPRS class 10
- SMS (text, data)

GPS features:

- Locosys 16 channel receiver
- NMEA, GGA, GGL, GSA, GSV, RMC, WGS-84 protocol compatible
- -159 dBm sensitivity

Hardware features:

- ARM7 TDMI processor
- 1 MB internal Flash memory (upgradeable up to 4 MB)
- Built-in movement sensor

Interface features:

- Power supply: (10...30) V
- RS232 port
- 2 digital inputs
- 2 open collector outputs
- 3 status LEDs

Special features:




- Any element event triggers (external sensor, input, speed, temperature, etc.)
- Highly configurable data acquisition and sending
- Multiple geofence areas

- Sleep mode
- Real-time process monitoring
- Authorized number list for remote access
- Firmware update via GPRS or RS232 port
- Configuration update via GPRS, SMS or RS232 port
- TCP/IP or UDP/IP protocol support
- 15000 record storing (upgradeable up to 60000)
- CE and e-mark certified

2.3 Mechanical features


Part name	Physical specification
Navigation LED	LED
STATUS LED	LED
MODEM LED	LED
GPS	GPS antenna connector MCX
Socket 2×3	Tyco Micro MATE-N-LOK 3mm 794617-6
PORT 1/NMEA	Mini USB socket (RS232 physical layer)

Technical details
Power supply (10...30) V DC 12W Max
Energy consumption:
GPRS: --- 200 mA r.m.s Max.,
Nominal: --- 65 mA r.m.s.,
Sleep: --- 32 mA r.m.s.
Operation temperature:
-25°C ... +55°C
Storage temperature:
-40°C ... +70°C
Storage relative humidity 5 ... 95% (non condensation)

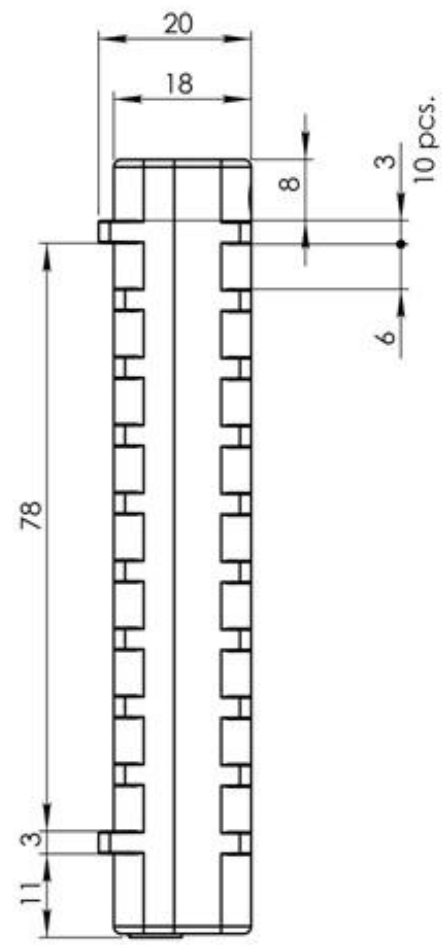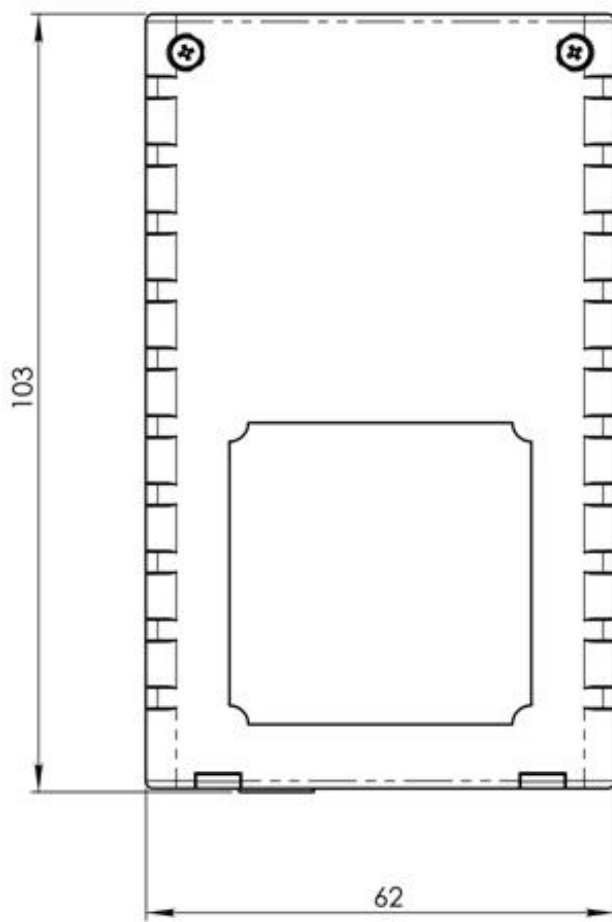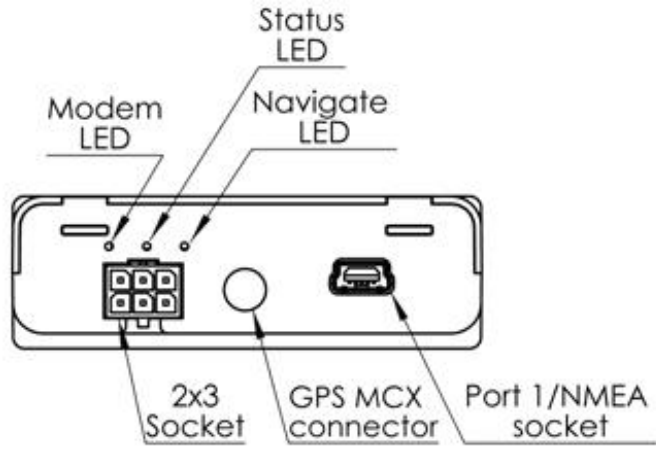

3 CONNECTION, PINOUT, ACCESSORIES


3.1 SIM card insert scheme

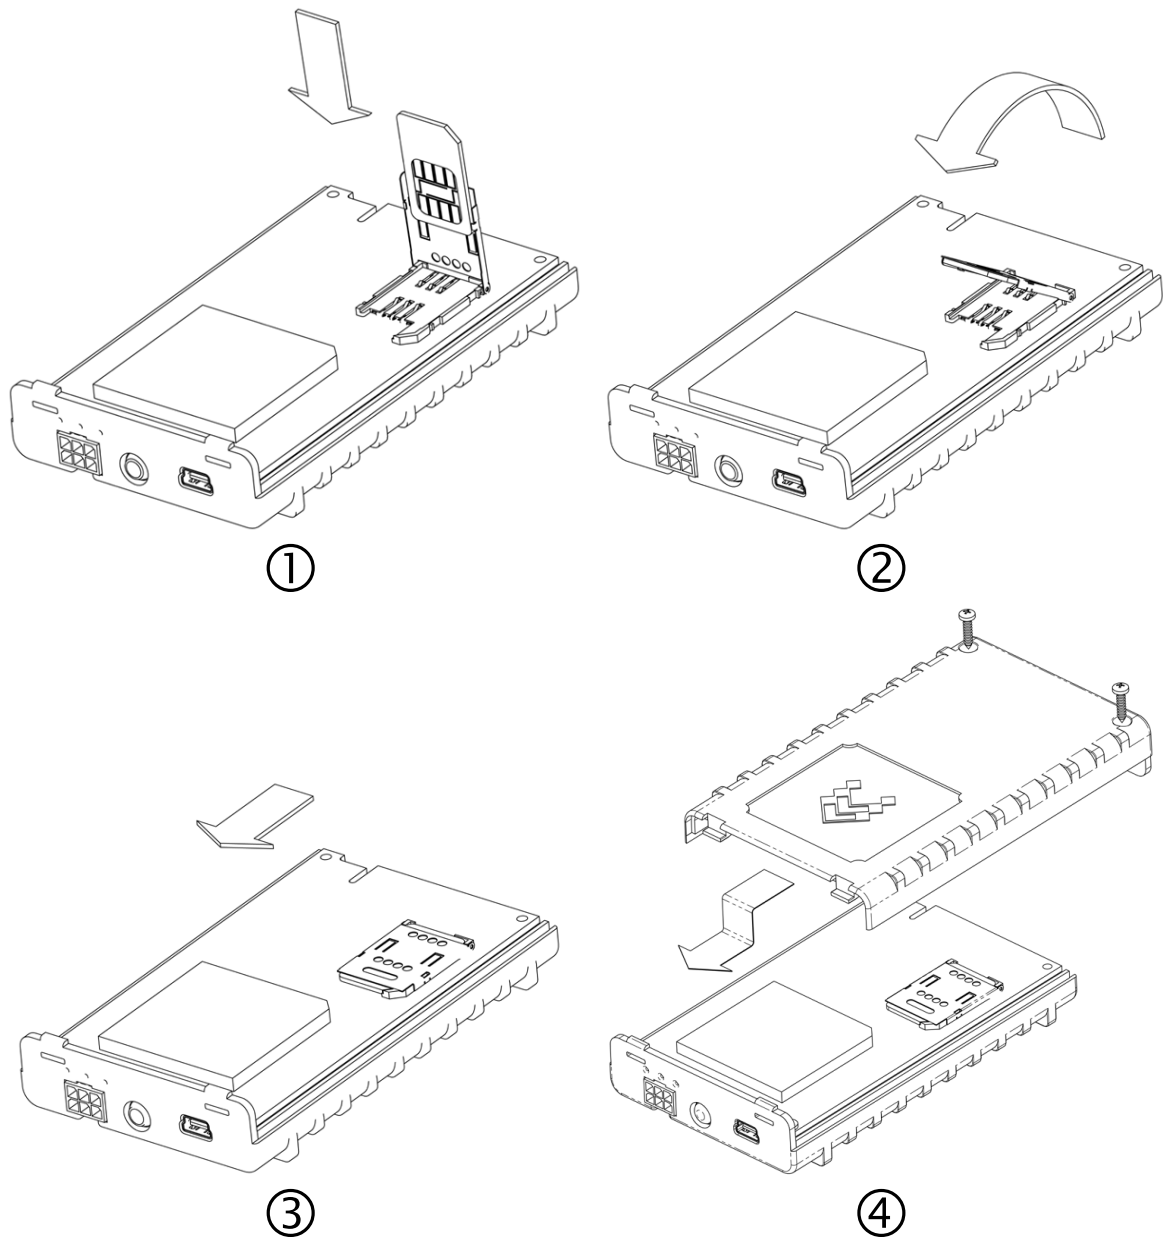

①	Open the SIM holder and insert the SIM card as shown.
②	Close the SIM holder
③	Push SIM holder's top part in shown direction to clip SIM holder
④	Assemble device with enclosure's top part as shown and screw the bolts.

3.2 Navigate LED


When GPS signal is not received, the Navigation LED is switched on permanently.
When GPS signal is received, the Navigation LED is blinking as follows:

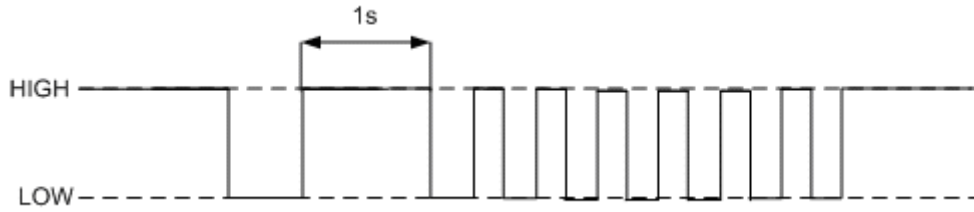


When Navigation LED is off, that means GPS antenna or connector is short circuited

3.3 Modem LED

When device is connected to the GPRS – Modem LED is blinking every second:

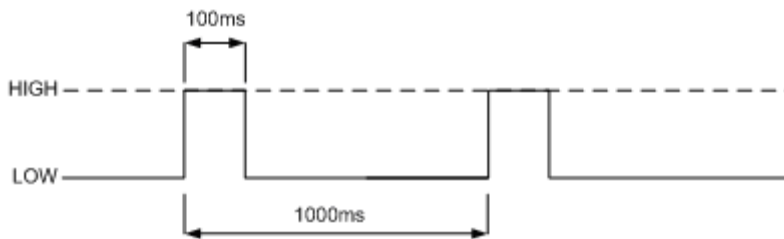

When device is not connected to GPRS – Modem LED is blinking every 5 seconds:

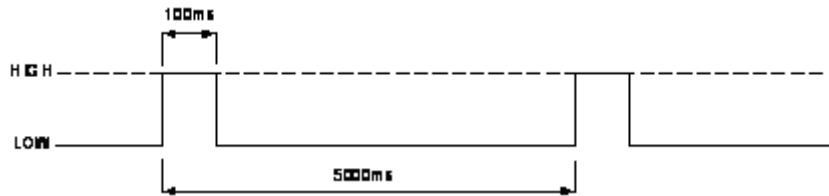

3.4 Status LED

When device has uploaded firmware – Status LED should blink. If LED does not blink – it means that device does not function.

3.5 Socket 2x3

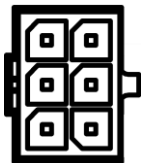
DIN 1	3		6	OUT 2
DIN 2	2		5	OUT 1
VCC (10...30)V DC (+)	1		4	GND(VCC(10...30)V DC)(-)

Figure 2. 2x3 socket pinout

Pin Nr.	Pin Name	Description
1	2	3
1	VCC (10...30) V DC (+)	Power supply for module. Power supply range (10...30) V DC Energy consumption: GPRS: --- 200 mA r.m.s Max., Nominal: --- 65 mA r.m.s..
2	DIN 1	Digital input, channel 1*
3	DIN 2	Digital input, channel 2*
4	GND (VCC(10...30) V DC)(-)	Ground pin. (10...30) V DC (-)
5	OUT 1	Digital output. Channel 1. Open collector output. Max. --- 150 mA.
6	OUT 2	Digital output. Channel 2. Open collector output. Max. --- 150 mA.

* - digital input status (0...~2) V – FALSE; (~2...30) V – TRUE

3.6 PORT 1/NMEA

Mini USB connector	PORT 1 (RS232)	
	Pin Nr.	Description
	1	GPS TX (NMEA)
	2	RX
	3	TX
	4	-
	5	GND



FM2100 has not USB interface; it has Mini USB connector type with physical RS232 interface.
Do not plug it to PC's USB port. Please use cables provided with FM2100 device.

This port can be used as system port (to flash firmware and configuration to device) with cable "Port1" and as GPS NMEA 0183 output with cable "GPS".


3.7 Accessories




Note: Teltonika doesn't provide any additional equipment like panic buttons, door sensors or others.

Alarm buttons, door sensors, etc

Alarm buttons, door sensors, ignition, etc return two states: high or low voltage. Digital inputs should be used to read this information. Figure below shows how to connect alarm button, door sensor, etc.

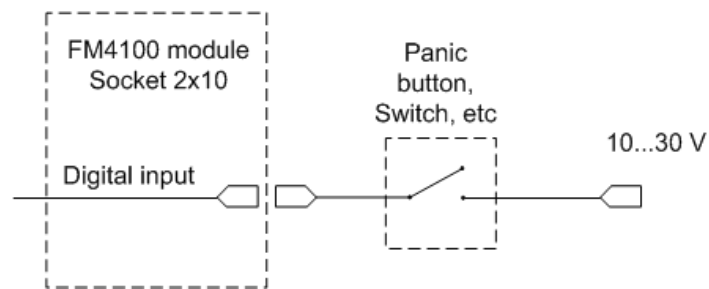


In cases when sensor output signal is negative an additional relay has to be installed to convert negative signal to positive.

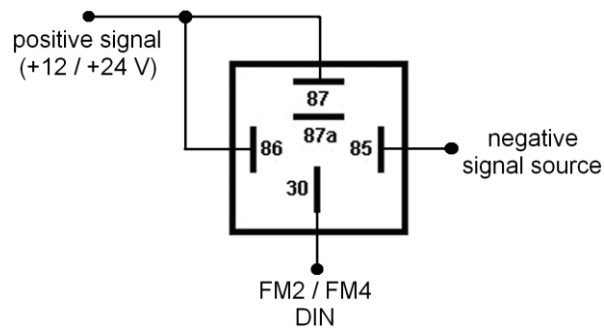


Immobilizer relay

When connected as shown below, FM4 disables engine starter when output is ON. More details about relays can be found below.

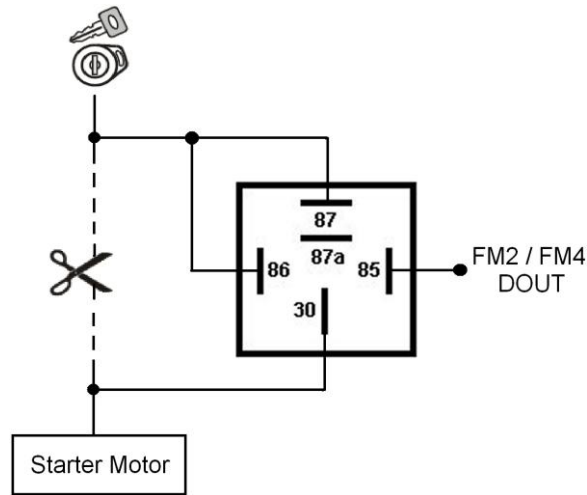

Relays

A simple automotive relay is used to invert input signal or to immobilize engine starter. Note, that they are available as 12 or 24 Volt.

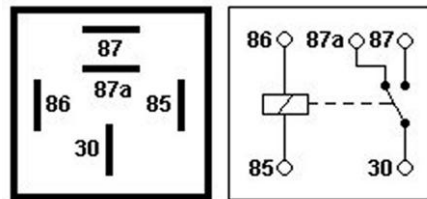

4 OPERATIONAL BASICS

4.1 Operational principals

FM2100 module is designed to acquire records and send them to server. Records contain GPS and I/O information. Module uses GPS receiver to acquire GPS data and is powered with 3 data acquire methods: time-based, distance-based, angle-based methods. Method's details are described in **GPS** section. All data is stored in flash memory and later can be sent via GPRS or SMS channels. GPRS mode is most preferred data sending mode. SMS mode is mostly used in areas without GPRS coverage or GPRS usage is too expensive.

GPRS and SMS settings are described in **GPRS** section. FM2100 communicates with server using special data protocol. Data protocol is described in "FM4 Protocols" document.

FM2100 can be managed by SMS commands. SMS Command list is described in **SMS COMMAND LIST** section. Module configuration can be performed over TCP or via SMS. Configuration parameters and modes are described in "FM4 Protocols" document.

4.2 Sleep mode

FM2 can enter sleep mode (standby mode) under two conditions:

- FM2 does not detect movement.
- FM2 does not send or receive any data for 5 minutes. This means that if coordinate recording interval is more frequent than 5 minutes, FM2 will never go to sleep mode.

FM2 can exit sleep mode under three conditions:

- FM2 detects movement.
- Event or request forces FM2 to make a record

While in sleep mode, FM2 sets GPS receiver to sleep mode, therefore it does not record or send any data. The power usage also decreases allowing to save vehicle battery.

4.3 Virtual odometer

Virtual odometer is used to calculate traveled distance in FM2 as a separate I/O element. When FM2 detects movement, it starts counting distance using GPS signal: every second it checks current location and calculates distance between current and previous point. It keeps adding these intervals until it is time to make a record, then FM2 records its location and adds odometer value, which is equal to the sum of all distances, measured every second. When record is made, odometer resets to zero and distance calculation starts all over again. Note, that FM2 does not measure distance between coordinates, that it records using time, distance or angle change intervals. Instead it uses virtual points which are established every second, and calculates distance between them.

5 CONFIGURATION

5.1 Configurator


New FM2100 module has default factory settings. Settings should be changed according to your application and your GSM operator information.

FM2100 Configuration is performed via FM2100 Configurator program. Contact our sales manager to get latest FM2100 Configurator version. FM2100 configurator operates on Microsoft Windows OS and uses MS .Net Framework 2.0 or higher. Please ensure that MS .Net Framework 2.0 or later is installed on your PC before starting configurator. Latest MS .Net Framework version can be downloaded from official Microsoft web page.

Module configuration is performed over cable labeled PORT. Configuration process starts from loading FM2100 Configurator program and selecting COM port. Select COM port and click 'Connect' button.

FM2100 has 1 user editable profile stored in Flash no. 1 memory and one extra profile stored in Flash no. 0 which can not be edited by user. Profile from Flash no. 0 is used by system and can not be selected as active, while profile from Flash no. 1 is fully editable and can be selected as active.

After changing profile parameters, changes can be saved to FM2100 Flash. Figure below shows saving to flash memory procedure.

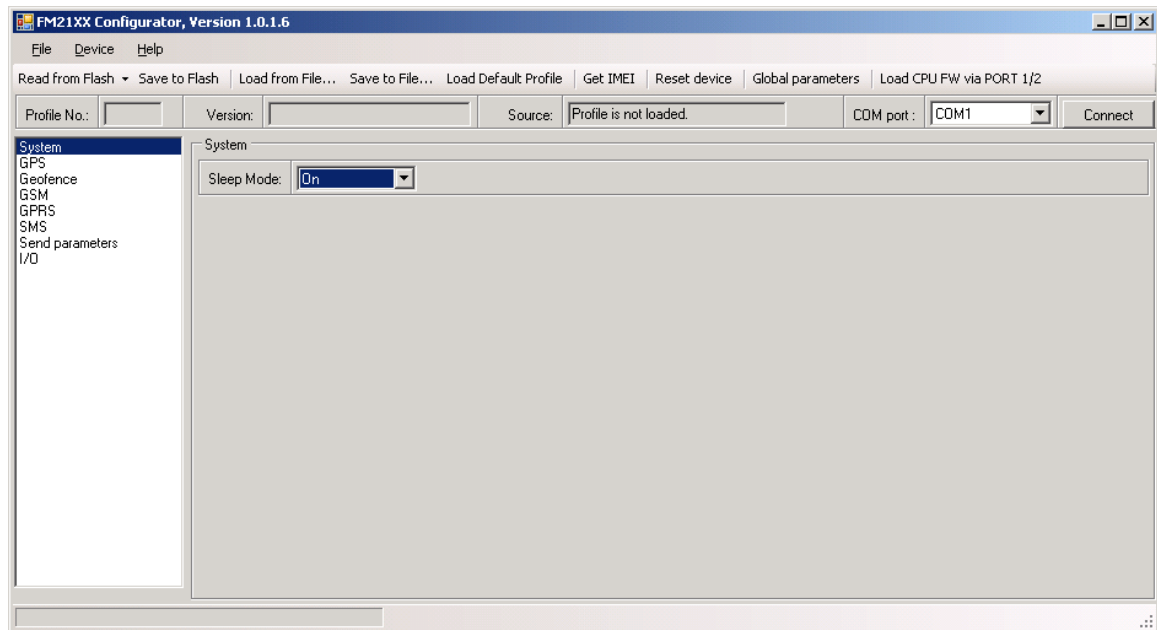

'Load from file' – allows user to load configuration saved in .XML extension file.


'Save to file' – allows user to save currently entered settings to a file.

'Load default profile' – loads default FM2 settings that later can be modified. This procedure must be performed before entering new parameters.

'Get IMEI' – reads FM2 IMEI number. This number is unique for every FM2 and usually servers recognize different devices by this number.

'Reset device' – reboots FM2 and displays processor firmware version.

5.2 Global Parameters

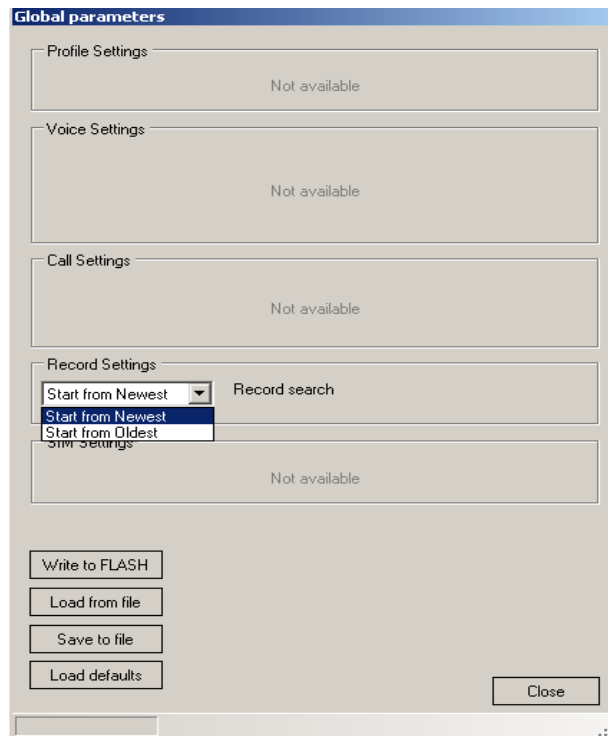

'Record Settings' – are used to switch between two data sending modes:


- 'Start from Newest' – LIFO data sending mode (Last In, First Out).
- 'Start from Oldest' – FIFO data sending mode (First In, First Out).

5.3 System settings

System settings menu has only one parameter – Sleep mode. It can be enabled or disabled by turning it on or off. See sleep mode description for more details.

5.4 GPS settings


GPS settings define GPS data acquiring methods and frequencies.

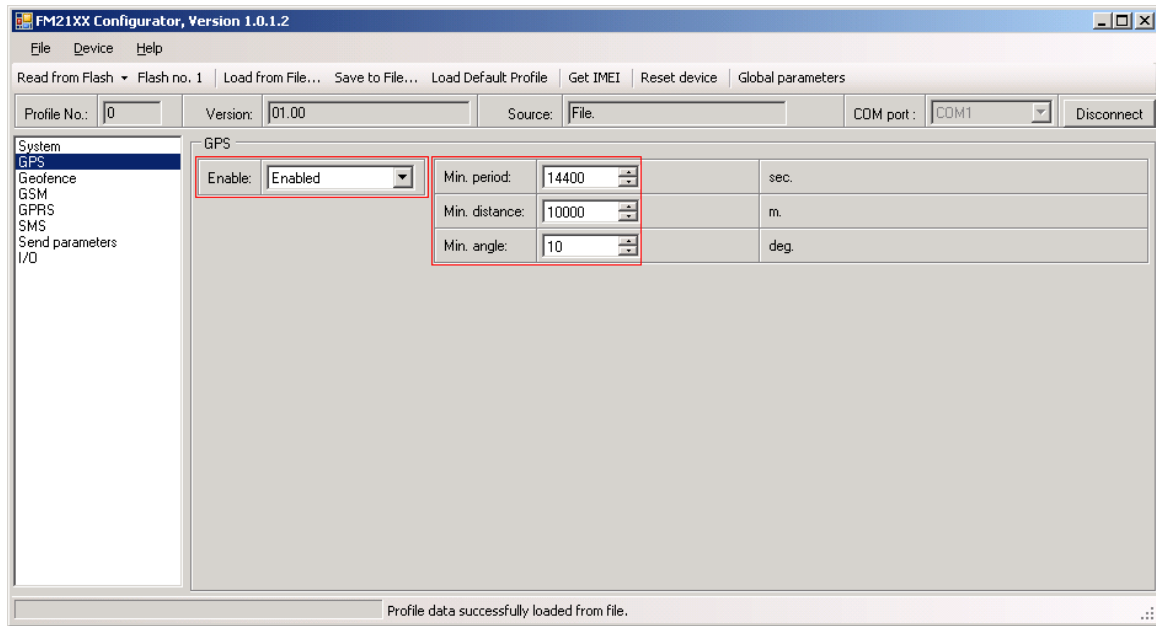


Device is checking if the time between last saved record and current time is equal or higher than Time based acquire interval. If so, FM saves record to memory. If not, FM checks if the distance from last record to current record is equal or higher than Distance based acquire interval. If so, saves the record to memory. If not and speed is higher than 10km/h, then FM is checking if angle difference between last record and current record is equal or higher than Angle based acquire value. If so, saves the record to memory. This check is being performed every second.

FM2100 is able to collect records using three methods at the same time: time, distance and angle based data acquisition:


- Time based data acquiring (Min. period) – records are being acquired every time when defined interval of time passes. Entering zero means that data will be recorded as fast as possible (every second).

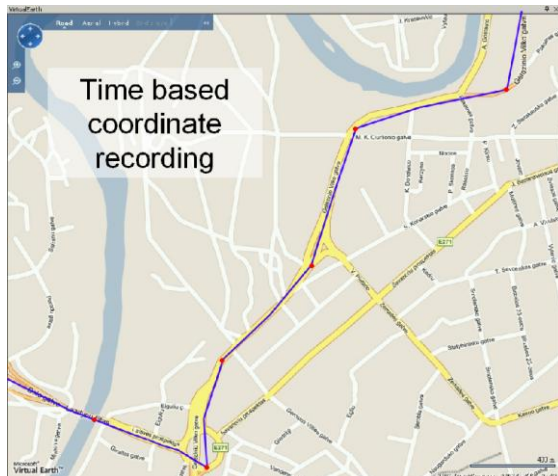

- Distance based data acquiring (Min. distance) - records are being acquired when the distance between previous coordinate and current position is greater than defined parameter value. Entering zero means that data will be recorded every 0 meters (as fast as possible – every 1 second).

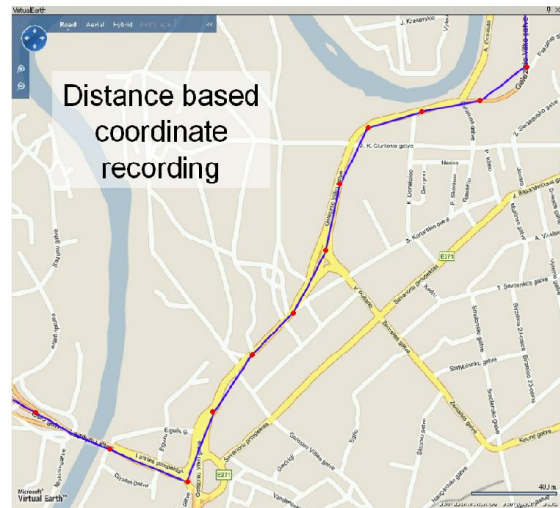


- Angle based data acquiring (Min. angle) - records are being acquired when angle difference between last recorded coordinate and current position is greater than defined value. Entering zero disables data acquisition depending on angle.

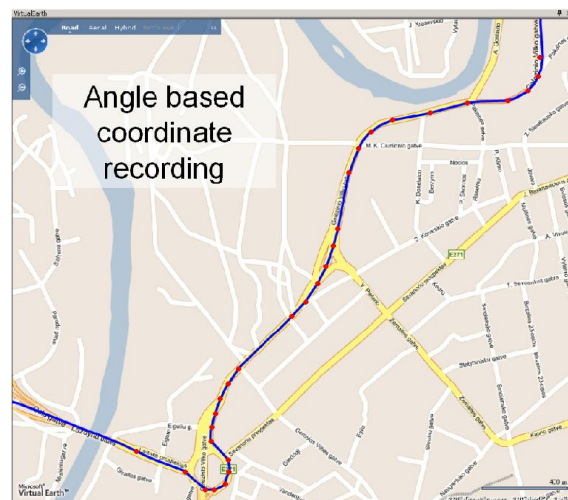

5.5 Geofence settings


FM2100 has 5 configurable Geofence zones and it can generate event when defined Geofence zone border is crossed.

- Frame border – frame border is an additional border around Geofence zone. It is additional area around defined zone used to prevent false event recording when object stops on the border of the area and because of GPS errors some records are made inside area and some – outside. Event is generated only when both borders are crossed. See figure for details: track 1 is considered to enter the area while track 2 does not.
- Shape – can be rectangular or circle
- Priority – priority of Geofence event – low, high or panic. These levels define priority of event information sending to server. See I/O element description for more details about priorities.
- Enter event – enable or disable zone entering event
- Exit event – enable or disable zone leaving event
- X1 – geofence zone left bottom corner X coordinate
- Y1 – geofence zone left bottom corner Y coordinate
- X2 or R – geofence zone upper right corner X coordinate (radius of circle when Circular zone used)
- Y2 – geofence zone upper right corner Y coordinate

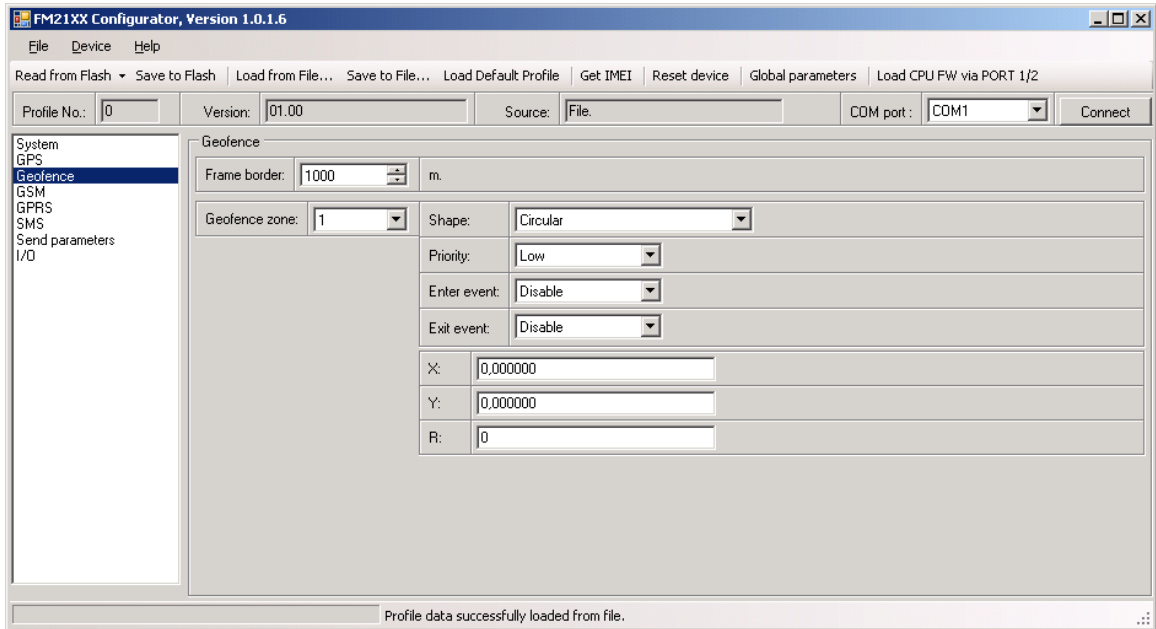

5.6 GSM settings

'GSM Settings' allows to set protocol used for data transfers – TCP or UDP. 'Min Saved Records' defines minimum number of coordinates that should be transferred with one connection to server. If FM2 does not have enough coordinates to send to server, it will check again after time interval defined in 'Sending Period' (see below).

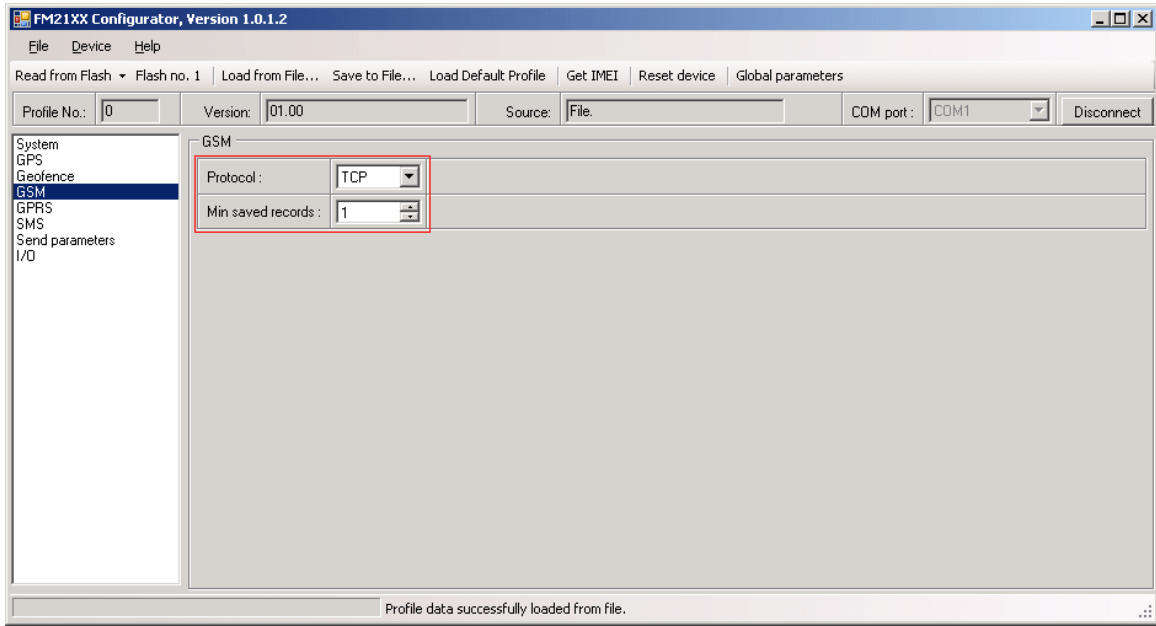


5.7 GPRS settings

'GPRS Settings' define two main parameters for FM2: GSM operator APN and GPRS username and password (optional – depending on operator), and destination server IP and port.

Some operators use specific authentication for GPRS session – CHAP or PAP. If any of these is used, APN should be entered as '<APN>:c' or '<APN>:p'.

I.e. if operator is using APN 'internet' with CHAP authentication, it should be entered as 'internet:c'.

Information about APN and authentication type should be provided by your GSM operator.

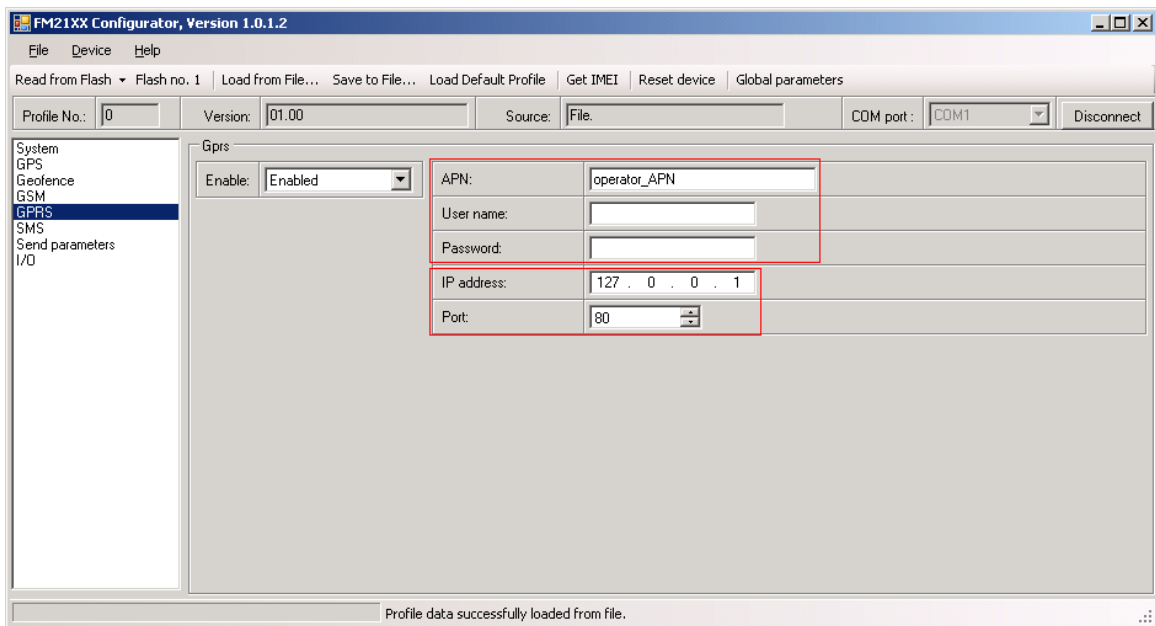


5.8 SMS settings

- SMS data send – enable or disable periodic data and event SMS use. Note, that this does not affect replies to messages – they are always sent to sender number.
- SMS send timeout – SMS send timeout (recommended 60 sec.)
- SMS Login – module login for SMS
- SMS Password – module password for SMS
- Server phone number – authorized server phone number for SMS requests, configuration, 24-coordinates and event binary SMS
- Authorized phone numbers – other authorized numbers that are allowed to control FM2 remotely



Module login and password, server and authorised number list is used to protect FM2 module from unauthorised access. Module accepts messages only from a list of authorised numbers and with proper module login and password. Numbers must be without “+” or “00” prefix. If no authorised numbers are entered, module accepts messages from all numbers. Server phone number automatically counts as authorised number.

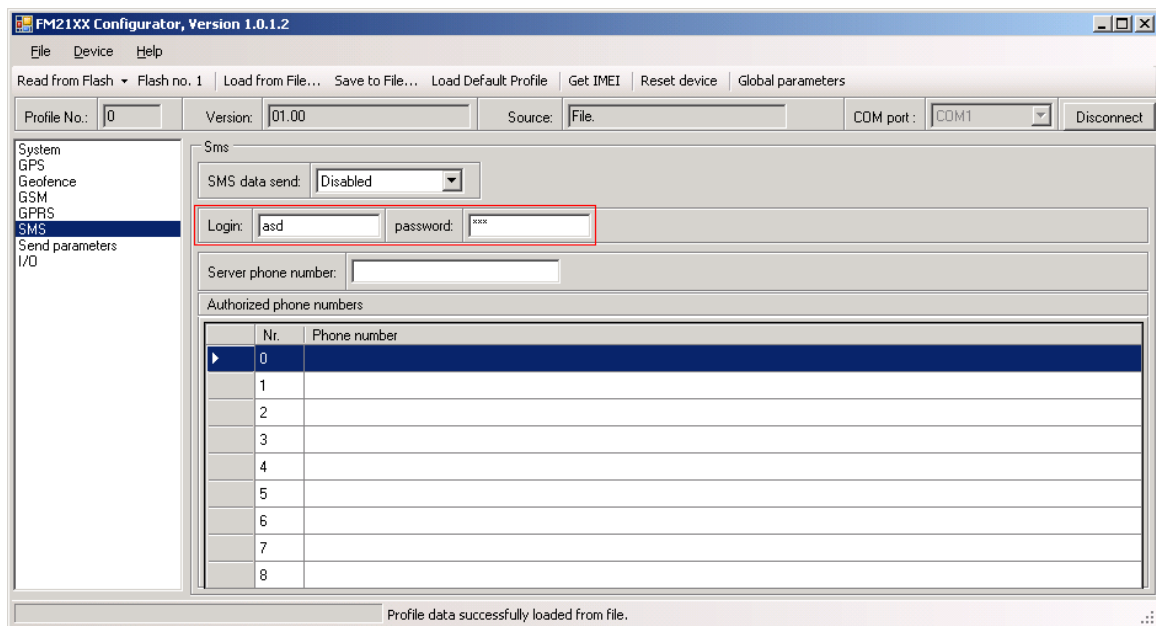

5.9 Send Parameter settings

Send parameters window allow to set GPRS and SMS data send periods, sending schedules, set allowed operator list.

- Send period – GPRS data sending to server period. Module makes attempts to send collected data to server every defined period. If it does not have enough records (depend on parameter Min. Saved Records described above), it tries again after defined time interval
- Time step - FM2 is improved with 24-coordinates-in-one-SMS sending mechanism. 24-coordinates-in-one-SMS mechanism is used in areas where no GPRS coverage is available. Module collects data and sends to server binary SMS containing information about last 24 collected points with interval between them defined in


time step field. SMS sending schedule is set in SMS Week Time tab. 24-Coordinates SMS decoding is described in “FM Protocols” document.

- GPRS Context Week Time tab – most GSM billing systems charge number of bytes (kilobytes) transmitted per session. During the session FM2 makes connection and transmits data to a server. FM2 tries to handle session as much as possible. Session can last hours, days, weeks or session can be closed after every connection in certain GSM networks – this depends on GSM network provider. GPRS Context Week Time defines session re-establish schedule if session was closed by network. New GPRS context is opened if time is 10 minutes till time checked in table. Therefore if all boxes are checked, FM2 is able to open new connection anytime. At scheduled time match FM2 checks for GPRS session activity. If GPRS session is alive, FM2 sends data to server according to Send period parameter. If it is not, FM2 checks if it is able to re-establish the session.
- SMS Week Time tab – week time allows to set SMS data sending schedule. SMS mode mostly used in areas where GPRS is not available.



Note FM2100 operates GMT time without daylight saving.

- Operators list - FM2 is able to use GPRS with all operators, but if at least one operator is entered in the list, FM2 is allowed to connect to GPRS only while operating in listed operator network.

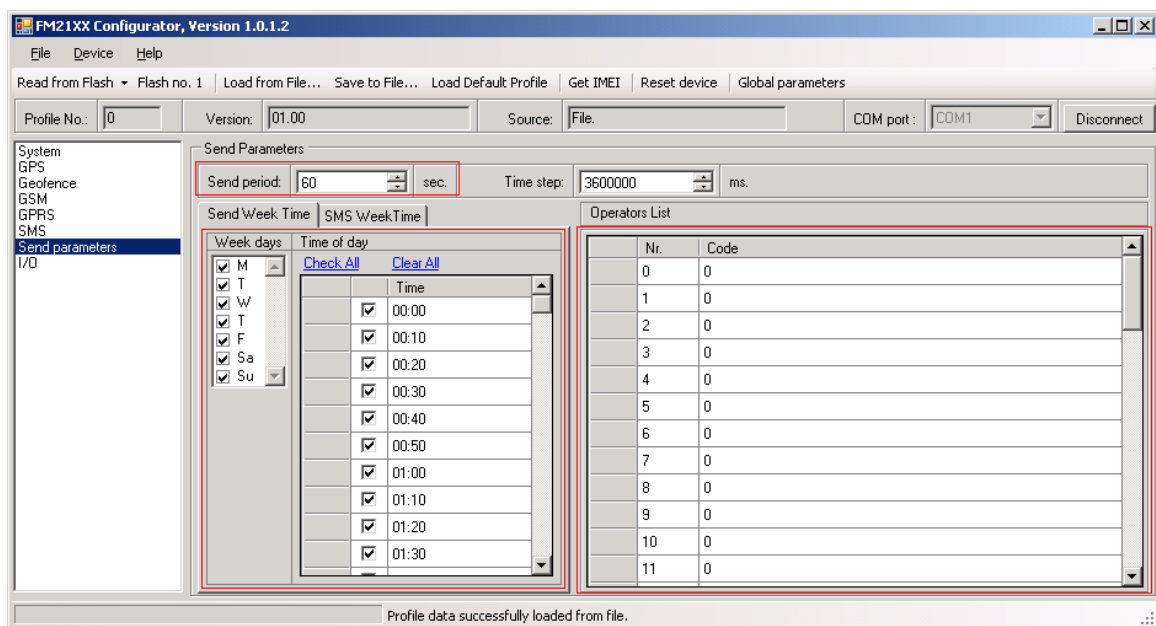


5.10 I/O settings

When no I/O element is enabled, AVL packet comes with GPS information only. After enabling I/O element(s) AVL packet in couple with GPS information contains current value(s) of enabled I/O element.

Property ID	Property Name	Bytes	Description
1	Digital Input Status 1	1	Logic: 0 / 1
2	Digital Input Status 2	1	Logic: 0 / 1
66	Power Supply Voltage	2	Voltage: mV
69	GPS Power	1	States: 0 – short circ., 1 – connected.
70	PCB Temperature	2	10 * Degrees (°C)
155	Geozone 01	1	Event: 0 – target left zone, 1 – target entered zone
156	Geozone 02	1	Event: 0 – target left zone, 1 – target entered zone
157	Geozone 03	1	Event: 0 – target left zone, 1 – target entered zone
158	Geozone 04	1	Event: 0 – target left zone, 1 – target entered zone
159	Geozone 05	1	Event: 0 – target left zone, 1 – target entered zone
199	Virtual Odometer	4	Value returned in meters.
240	Movement	1	0 – not moving., 1 – moving.
179	Digital output 1 state	1	Logic: 0 / 1
180	Digital output 2 state	1	Logic: 0 / 1
181	PDOP	2	Probability*10; 0-500
182	HDOP	2	Probability*10; 0-500



There are two types of operations with I/O elements: simple monitoring and event generating. Monitoring method is used when current I/O information needed with regular GPS coordinates. Event generating method is used when additional AVL packet is needed when current value of I/O exceeds predefined High and Low levels. I/O settings allow to define I/O event criteria.

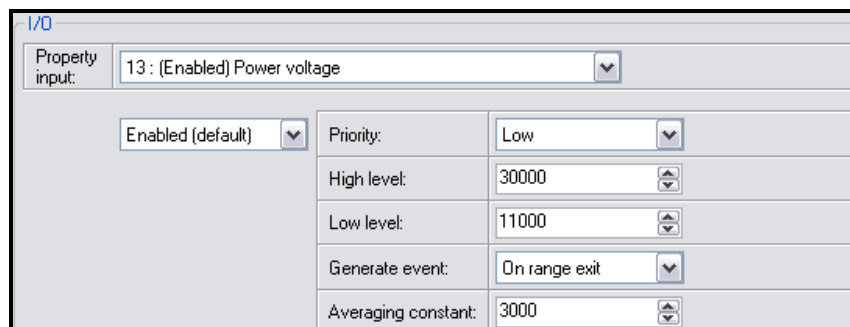

- Enabled or disabled field – allows to enable I/O element so it is added to the data packet and is sent to the server. By default all I/O element are disabled and FM2 records only coordinates.
- Priority – AVL packet priority – low, high or panic. Regular packets are sent as Low priority records. When low priority event is triggered, FM2 makes additional record with indication that the reason for that was IO element change. When High priority is selected, module makes additional record with high priority flag and sends event packet immediately to the server by GPRS. Panic priority triggers same actions as high priority, but if GPRS fails, it sends AVL packet using SMS mode if SMS is enabled in SMS settings.
- High and Low levels – define I/O value range. If I/O value enters or exits this range, FM2 generates event. “Generate event” parameter defines when to generate event – when value enters defined range, exits it or both.
- Averaging constant – it is an I/O event delay parameter. In some applications there is no need to generate events on every I/O range enter/exit immediately. Sometimes it is necessary to wait some time interval before event generating. Averaging constant allows to set I/O event delay (averaging). If I/O value is entering or leaving

predefined range, it must have same value for Averaging constant time. 1 Averaging constant value equals 20 milliseconds.

5.10.1 Monitoring

I/O monitoring starts after enabling I/O element and setting up I/O parameters in the following order:

Priority	always low
High level	-1000
Low level	-1000
Generate event	on range enter
Average constant	1

High and Low level's values are always -1000 because these thresholds will never be reached by any of I/O and never generate any additional AVL packet.

Another solution for IO element monitoring is to choose 'Monitoring' option in 'Generate Event' field – this way events will never be generated o matter what values are entered in fields.


5.10.2 Event Generating

Events happen when the value of enabled I/O intersects thresholds (enter, exit or on both) predefined by High and Low level thresholds. Table below defines all available values of I/O settings.

Priority	low, high
High level	maximum threshold
Low level	minimum threshold
Generate event	on interval enter, on interval exit, on both enter and exit
Average constant	$1 - 2^{32}$ (4 Bytes)

6 SMS COMMAND LIST

6.1 SMS settings for FM2

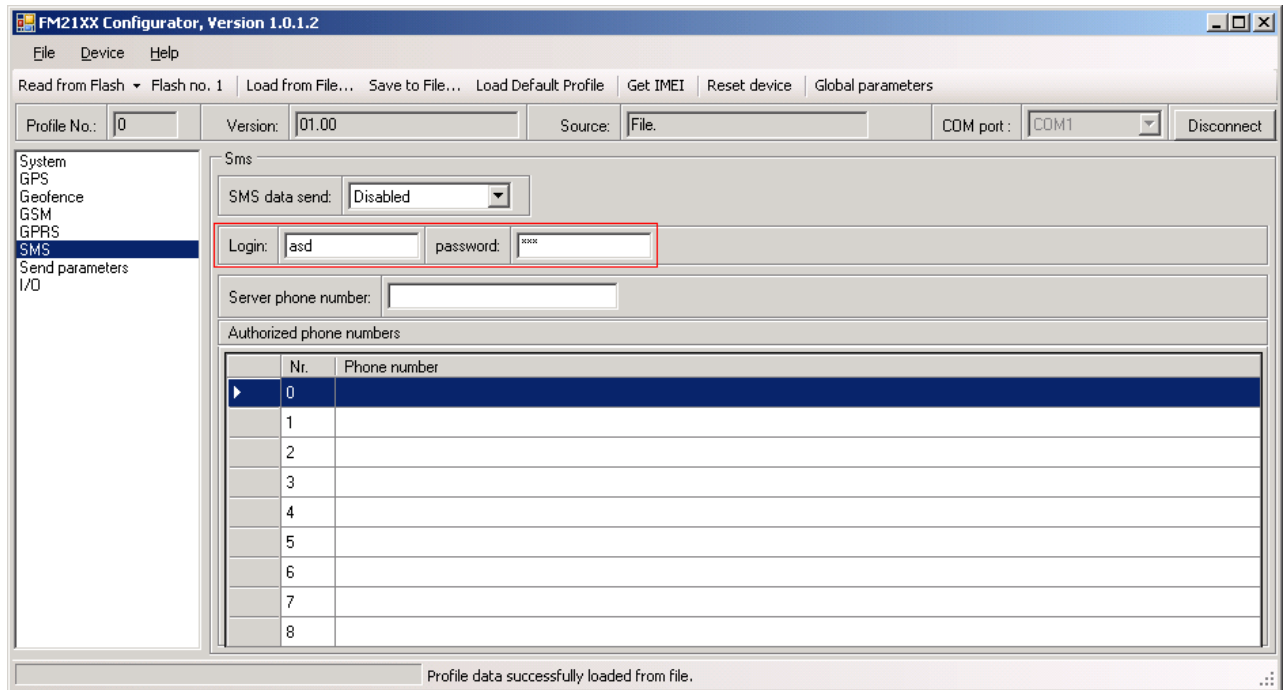

Essential fields in 'SMS Settings' are 'Login' and 'Password'. This login and password should be used with every SMS sent to FM2 as identifiers and means of protection from SMS from unauthorised numbers.

Command structure:

<login><space><password><space><command>

Example:

asd 123 getgps

6.2 SMS command list

Command	Description	Response
getstatus	Modem Status information	Yes
getweektime	Current device time, Day of Week and amount of minutes passed since start of week	Yes
getops	List of currently available GSM operator	Yes
getcfgtime	Date and Time of last successful configuration	Yes
getgps	Current GPS data and time	Yes
cpureset	Reset CPU	No
resetprof	Reset all FLASH1 profile to default profile	No

getver	Device / Modem / Code version information	Yes
getinfo	Device runtime system information	Yes
deleterecords	Delete all records saved on FLASH	No
getio	Readout digital inputs and outputs	Yes
radio #	Readout input value according entered ID, # - ID value	Yes
setdigout ##	set digital outputs 0 - OFF, 1 – ON DO1 DO2 DO3 DO4	Yes
getparam #	Readout parameter value according entered ID. # - ID value.	Yes
setparam # #	Set parameter value according entered ID and Value. 1.# - ID value. 2.# - New Parameter Value	Yes
flush #,#,#,#,#,#,#	Initiates all data sending to specified target server 1.# - IMEI 2.# - APN 3.# - LOGIN 4.# - PASS 5.# - IP 6.# - PORT 7.# - MODE (0-TCP/1-UDP)	No

6.2.1 getstatus

Response details	Description
Data Link	Indicate module connection to server at the moment: 0 – Not connected, 1 - connected
GPRS	Indicate if GPRS is available at the moment
Phone	Voice Call status: 0 – ready, 1 – unavailable, 2 – unknown, 3 – ringing, 4 – call in progress, 5 - asleep
SIM	SIM Status: 0-ready, 1-pin, 2-puk, 3-pin2, 4-puk2
OP	Connected to GSM Operator: numerical id of operator
Bat	Battery charge level [0-5]
Signal	GSM Signal Quality [0-5]
Service	
NewSMS	Indicate if new message received
Roaming	0 – Home Network, 1 - roaming
SMSFull	SMS storage is full? 0 – ok, 1 – SMS storage full

Example: Data Link: 0 GPRS: 1 Phone: 0 SIM: 0 OP: 24602 Bat: 4 Signal: 5 Service: 1 NewSMS: 0 Roaming: 0 SMSFull: 0

6.2.2 getweektime

Response details	Description
Clock Sync	Indicates system clock synchronization status. 0 – System is not synchronized, 1 – System synchronized
DOW	Day Of Week – indicates current day of week starting from 0 – Monday, 1 – Tuesday, etc.
Time	Indicates current GMT time
WeekTime	Indicates time in minutes starting from Monday 00:00 GMT

Example: Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538

6.2.3 getops

Response details	Description
LIST	Returns list of current available allowed operators.

Example: GSM OP LIST: 0. 24602

6.2.4 getcfgtime

Response details	Description
Date/Time	Returns last performed configuration date and time.

Example: Last Configuration was performed on: 2010.4.15 5:45:19

6.2.5 getgps

Response details	Description
GPS	Indicates valid (1) or invalid (0) GPS data
Sat	Count of currently available satellites
Lat	Latitude (Last good Latitude)
Long	Longitude (Last good Longitude)
Alt	Altitude
Speed	Ground speed, km/h
Dir	Ground direction, degrees
Date	Current date
Time	Current GMT time

*Example: GPS:1 Sat:7 Lat:54.71473 Long:25.30304 Alt:147 Speed:0 Dir:77 Date: 2007/8/24
Time: 13:4:36*

6.2.6 getver

Response details	Description
Code Ver	Firmware version
Device IMEI	IMEI
Device ID	Device ID is used to detect by server which type of configuration to load
Modem App Ver	Version of modem application
Modem REV Ver	Modem Firmware version

Example: Code Ver:0.48.17 Device IMEI:353976010139156 Device ID:000001 Modem APP Ver:2007.11.07 Modem REV Ver:04.13.00

6.2.7 getinfo

Response details	Description
INI	Device Initialization Time
RTC	RTC Time
RST	Restart Counter
ERR	Error Counter
SR	Number of Sent Records
BR	Number of broken records
CF	Profile CRC Fail counter
FG	Failed GPRS counter
FL	Failed link counter
UT	UPD Timeout counter
SMS	Sent SMS Counter
NOGPS	No GPS Timer
GPS	GPS receiver state. 0 – OFF, 1 – restarting, 2 – ON but no fix, 3 – ON and operational, 4 – sleep mode
SAT	Average satellites
RS	Reset Source Identification

Example: INI:2007/8/24 10:15 RTC:2007/8/24 12:43 RST:2 ERR:11 SR:182 BR:0 CF:0 FG:0 FL:0 UT:0 SMS:2 NOGPS:0:0 GPS:3 SAT:7 RS:7

6.2.8 getio

Response details	Description
DI#	Digital Input state
DO#	Digital Output state

Example: DI1:0 DI2:0 DO1:0 DO2:0

6.2.9 readio

Response details	Description
ID	IO element ID
Value	IO Element value

Example: IO ID:3 Value:0

6.2.10 setdigout

Sets digital outputs to ON or OFF state. Value is written as a row for OUT1 and OUT2 values.

Example: 'setdigout 01' will set OUT2 to high level, while OUT1 to low level.

6.2.11 getparam

Read parameter value. ID consists of 4 digits – first digit identifies profile, second, third and fourth identifies parameter ID as described in Parameter List chapter.

Response details	Description
ID	Profile number and parameter ID
Value	Parameter value

Example: 'getparam 1245' command will request server IP address in profile1.

6.2.12 setparam #####

Sets new value for parameter. ID consists of 4 digits - first digit identifies profile, second, third and fourth identifies parameter ID as described in Parameter List chapter. In value field a new parameter value is entered.

Example: 'setparam 1245 127.0.0.1' will change configured IP address in profile1 with new value

6.2.13 flush #,#,#,#,#,#,#

Initiates all data sending by GPRS to specified target server. Comma separated parameters go as numbered:


- 1.# - IMEI
- 2.# - APN
- 3.# - GPRS LOGIN
- 4.# - GPRS PASSWORD
- 5.# - IP
- 6.# - PORT
- 7.# - MODE (0-TCP/1-UDP)

Parameters are separated by comma (no spaces needed). In case you don't need to enter parameter (Login/Pass) – do not put space, simply put comma and write next parameter.

Example: opa opa flush 353976012555151,banga,,212.47.99.62,12050,0

7 Debug mode

FM2 is able to transmit its current state when connected to PC using PORT1 cable. It is used to detect errors and provide information to possible solutions when operating as unexpected. Contact our sales manager to get Terminal. After launching it choose baud rate 115200 and hardware control – none. Click on 'Start Log' button and save a new file. Then click 'Connect' to start receiving messages from FM2.

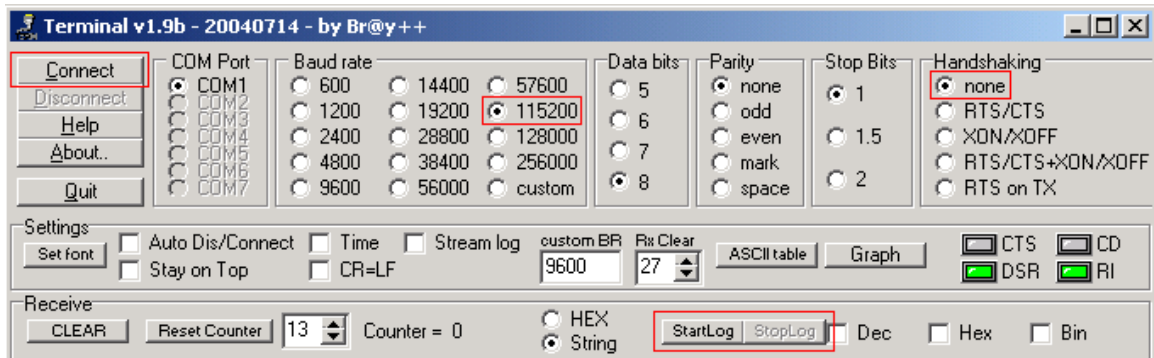

8 Parameter List

FM2100 uses only one profile, therefore all changes to parameters must be done in profile1 (profile0 for global parameters).

8.1 Global Parameters

8.1.1 Record search (ID 105)

Record search parameter is responsible for record searching order. Value of 0 arranging data starting from newest, while value of 1 arranging data starting from oldest.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	-	Data Send interval (ID=270)	S8

8.2 Data acquisition and sending parameters

8.2.1 Time based acquire interval (ID=11)

Time interval in seconds, indicating condition to acquire new record.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
1	9999999	5	Distance based acquire interval (ID=12) Angle based coordinate acquisition (ID=13)	U32

8.2.2 Distance based acquire interval (ID=12)

Distance in meters, indicating condition to acquire new record. Record is stored when the distance between previous record is greater than parameter's value.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
1	65535	50	Time based acquire interval (ID=11) Angle based coordinate acquisition (ID=13)	U16

8.2.3 Angle based coordinate acquisition (ID=13)

Angle in degrees, indicating condition to acquire new record. If angle difference between last recorded coordinate and current position is greater than defined value, new record is stored. This parameter is operational, when speed is higher then 10km/h.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
1	359	10	Time based acquire interval (ID=11) Distance based acquire interval (ID=12)	U32

8.2.4 Data Send interval (ID=270)

Time interval in seconds, indicating frequency of sending data to server.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	65535	5	GPRS Enable (ID=240) GPRS Data send week time schedule (ID=272) Minimum records number in packet (ID=232)	U16

8.2.5 Minimum records number in packet (ID=232)

Minimum number of records in one data packet that can be sent to server. This parameter has higher priority than Data Send interval (ID=270).

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
1	25	1	Time based acquire interval (ID=11) Distance based acquire interval (ID=12) GPRS Data send week time schedule (ID=272) Data Send interval (ID=270)	U8

8.2.6 GPRS Enable (ID=240)

Parameter allows or does not allow using GPRS. If GPRS is not allowed value is 0, if GPRS is allowed - 1.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	1	Data Send interval (ID=270) Minimum records number in packet (ID=232) GPRS Data send week time schedule (ID=272)	S8

8.2.7 GSM Operator list (ID=271)

Parameter defines operator list. According to this list module allows GPRS connection only while operating under listed operators. GSM operator codes are comma separated. Example: 24601, 24602, 24705...24503

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	-	-	-	U32

8.2.8 GPRS Data send week time schedule (ID=272)

This parameter manages when it is allowed to open GPRS context. When module starts it is prohibited to open the context. When modem's GPRS context is being closed (for example changing network) it is allowed to open it only at defined time. It is possible to allow connections every 10 minutes up to once per day.

Example value: 7FFF

Format is described in chapter 0

8.2.9 SMS Data send week time schedule (ID=273)

Parameter defines SMS data sending according to week time schedule. This parameter is used to set data sending on selected week days and hours. Minimum time step is 10 minutes.

Example value: 7FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF

Format is described in chapter 0

Schedule parameter format

Time is defined as 19 byte array. First byte of array defines week days, the rest 18 bytes define timestamps with 10 minute interval. In first byte, first bit (LSB) defines if module should connect to GPRS (send SMS) on Monday, second bit – on Tuesday and so on up to seventh bit – which means Sunday. Eighth bit (MSB) is not used. If bits value is 0 then device is not allowed to open GPRS context, but if it is already open – does not close it. If value is 1 it will work as day minutes are defined in rest of the bytes.

Day's minutes are defined by 18 bytes (144 bits). Every n'th bit (beginning from the first bit (LSB) and ending 18 bytes 8'th bit (MSB)) indicates every 10'th minute of the day (day has 1440 minutes).

Sample:

GPRS will be allowed on Monday to Friday at 8:00 and 16:00 GMT the following value should be configured:

```
00011111 00000000 00000000 00000000 00000000 00000000 00000000 00000001 00000000 00000000 00000000
00000000 00000000 00000001 00000000 00000000 00000000 00000000 00000000
```

Red bits indicate that GPRS will be allowed everyday except Saturdays and Sundays. Blue bits indicate 480 and 720 minutes (480min = 8h and 720min = 16h). So the parameter value should be:

```
1F 00 00 00 00 00 01 00 00 00 00 00 01 00 00 00 00 00
```

It should be sent as UTF8 encoded string.

8.2.10 SMS Data send allow (ID=250)

Parameter allows or does not allow using binary SMS to send Avl data. If SMS use is not allowed value is 0, and 1 if SMS use is allowed.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	0	SMS Data send week time schedule (ID=273) SMS Data send allow (ID=250)	S8

8.2.11 24 Records time step (ID=274)

Module is able to send binary SMS which contains 24 coordinates. Parameter ID=274 defines time step (in milliseconds) between each coordinate.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
1	4294967295	3600000	SMS Data send allow (ID=250) SMS Data send week time schedule (ID=273)	U32

8.3 Security settings and parameters

8.3.1 SMS User login (ID=252)

User login is used to ensure module security. Used in every SMS that is sent to device.

Example: ba321

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
empty	5 char string	-	SMS User password (ID=253) Server Number (ID=260) Authorized Number #1 (ID=261)	S8[5]

8.3.2 SMS User password (ID=253)

User password is used to ensure module security. Used in every SMS that is sent to device.

Example: ab123

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	5 char string	-	SMS User login (ID=252) Server Number (ID=260) Authorized Number #1 (ID=261)	S8[5]

8.3.3 Server Number (ID=260)

Value is server GSM number. To this number the SMS with 24 coordinates is sent.

Example: 37060012345

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	16 char string	-	SMS Data send allow (ID=250)	S8[16]

8.3.4 Authorized Number #1 (ID=261)

Parameters ID=262 to ID=269 have values for 8 more authorized numbers. If at least one number is entered then only those numbers can send messages to device.

Example: 37060012346

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	16 char string	-	SMS Data send allow (ID=250)	S8[16]

8.4 GPRS access and address settings

8.4.1 APN Name (ID=242)

Parameter defines GPRS Access Point Name.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	32 char string	-	GPRS Enable (ID=240) APN username (ID=243) APN Password (ID=244)	S8[32]

8.4.2 APN username (ID=243)

Parameter defines APN username. In case operator does not use username for login, value should be empty.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	6 char string	-	APN Name (ID=242) APN Password (ID=244)	S8[6]

8.4.3 APN Password (ID=244)

Parameter defines APN password. . In case operator does not use password for login, value should be empty.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	6 char string	-	APN Name (ID=242) APN username (ID=243)	S8[6]

8.4.4 Data send protocol (ID=231)

Parameter defines GPRS data transport protocol. Module can use TCP or UDP transport protocol to send data to server. For TCP protocol value is 0, for UDP protocol value is 1.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	0	GPRS Enable (ID=240)	U8

8.4.5 Server IP address (ID=245)

Parameter defines Avl data destination server IP address. Example: 212.47.99.62

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	16 char string	-	GPRS Enable (ID=240) Server port number (ID=246)	S8[16]

8.4.6 Server port number (ID=246)

Parameter defines Avl data destination server port number. Example: 12050

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
Empty	65535	-	GPRS Enable (ID=240) Server IP address (ID=245)	U16

8.5 Geofence zones settings and parameters

In this chapter it is explained how to get all parameters for the first GeoFence zone (all ID numbers are for the 1st zone). And at the end of the chapter (part 1.6.7) is presented a table with the IDs of all the rest GeoFence zones.

8.5.1 GeoFence border width (ID=20)

GeoFence border thickness, measured in meters.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
100	9999999	1000	GeoFence Zone #1 Configuration Parameter (ID=30)	U32

8.5.2 GeoFence Zone #1 Configuration Parameter (ID=30)

GeoFence Zone #1 Configuration is 1st zone basic settings parameter: GeoFence zone shape, priority, zone entering event, zone leaving event. There are two GeoFence zone shapes: circle, rectangle. GeoFence Zone priority has eight levels (0 to 7). Parameter value is four bytes that have bit encoded values.

- 0 bit – GeoFence zone shape
- 1-3 bits – GeoFence event priority
- 4 bit – Zone entering event
- 5 bit – Zone leaving event
- 6-31 bits reserved

Example:

Value to set: 51 (integer) is [M]00110011[L], where GeoFence Zone shape is Rectangular, priority of 1, Zone entering event is enabled, Zone leaving event is enabled.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	-	-	GeoFence border width (ID=20) GeoFence x1 (ID=31) GeoFence y1 (ID=32) GeoFence x2 (ID=33) GeoFence y2 (ID=34)	U32

8.5.3 GeoFence x1 (ID=31)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=31 is left down corner X coordinate in WGS. If shape is circle, then ID=31 is center of that circle X coordinate in WGS.

Sample value: 25.30528

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-180.0	180.0	-	GeoFence border width (ID=20) GeoFence Zone #1 Configuration Parameter (ID=30)	Float

8.5.4 GeoFence y1 (ID=32)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=32 is left down corner Y coordinate in WGS. If shape is circle, then ID=32 is center of that circle Y coordinate in WGS.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-90.0	90.0	-	GeoFence border width (ID=20) GeoFence Zone #1 Configuration Parameter (ID=30)	Float

8.5.5 GeoFence x2 (ID=33)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=33 is right upper corner X coordinate in WGS. If shape is circle, then ID=33 is radius of circle with center of ID=31 and ID=32.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-180.0	180.0	-	GeoFence border width (ID=20) GeoFence Zone #1 Configuration Parameter (ID=30)	Float

8.5.6 GeoFence y2 (ID=34)

If shape is rectangular, then ID=34 is right upper corner Y coordinate in WGS. If shape circle, ID=34 is not used.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-90.0	90.0	-	GeoFence border width (ID=20) GeoFence Zone #1 Configuration Parameter (ID=30)	Float

8.5.7 All the rest zones

Other 5 GeoFence zones parameters have the same logic as shown in GeoFence Zone #1.

GeoFence Zone Number	GeoFence Zone's parameters
2	40 – 44
3	50 – 54
4	60 – 64
5	70 – 74

8.6 System parameters

8.6.1 Device Power mode (ID=0)

Device can operate in two modes: active or sleep. In active mode (value 0) module is able to operate all tasks, while in sleep mode (value 1) module reduces level of power usage.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	-	-	Enum

8.6.2 GPS Enable (ID=10)

Parameter enables or disables GPS receiver. When GPS is disabled value is 0, and 1 when enabled.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	1	-	Time based acquire interval (ID=11) Distance based acquire interval (ID=12) Angle based coordinate acquisition (ID=13) Geofence zones settings and parameters	S8

8.7 IO properties

IO properties – are additional data sources which are recorded along with usual GPS data.

8.7.1 IO#1 property parameter (ID=300)

Parameter defines IO property value. Possible values:

0	1
Disabled	Enabled

If value is 'CAN', then CAN data is automatically added to this property.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	byte	-	IO#1 priority (ID=301) IO#1 High level (ID=302) IO#1 Low level (ID=303) IO#1 logic operand (ID=304) IO#1 averaging length (ID=305)	S8

8.7.2 IO#1 priority (ID=301)

Parameter defines IO property type of priority: 0 is low, 1 – high, 2 – panic, 3 – security priority type.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	3	0	IO#1 property parameter (ID=300) IO#1 High level (ID=302) IO#1 Low level (ID=303) IO#1 logic operand (ID=304) IO#1 averaging length (ID=305)	S8

8.7.3 IO#1 High level (ID=302)

Parameter defines high value of triggered IO property. This parameter is used to set thresholds for IO properties to generate events.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-2147483648	2147483648	1	IO#1 property parameter (ID=300) IO#1 priority (ID=301) IO#1 Low level (ID=303) IO#1 logic operand (ID=304)	S32

			IO#1 averaging length (ID=305)	
--	--	--	-----------------------------------	--

8.7.4 IO#1 Low level (ID=303)

Parameter defines low value of triggered IO property. This parameter is used to set thresholds for IO properties to generate events.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
-2147483648	2147483648	0	IO#1 property parameter (ID=300) IO#1 priority (ID=301) IO#1 High level (ID=302) IO#1 logic operand (ID=304) IO#1 averaging length (ID=305)	S32

8.7.5 IO#1 logic operand (ID=304)

Parameter defines when event is sent: 0: on range exit, 1: on range entrance, 2: both, 3: monitoring.

Minimal value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	3	3	IO#1 property parameter (ID=300) IO#1 priority (ID=301) IO#1 High level (ID=302) IO#1 Low level (ID=303) IO#1 averaging length (ID=305)	S8

8.7.6 IO#1 averaging length (ID=305)

Parameter defines IO property sample length to average. If no averaging needed default value is 1.

Minimum value	Maximum value	Recommended value	Goes with (depends on) parameters	Value type
0	2147483648	1	IO#1 property parameter (ID=300) IO#1 priority (ID=301) IO#1 High level (ID=302) IO#1 Low level (ID=303) IO#1 logic operand (ID=304)	S32

Other IO property elements are configuring in same logic. All IO elements parameter list is below.

IO Element Number	IO element parameters
IO#0 – Digital input 1	300 – 305
IO#1 – Digital input 2	310 – 315
IO#2 – Digital output 1	320 – 325
IO#3 – Digital output 2	330 – 335
IO#4 – PDOP	340 – 345
IO#5 – HDOP	350 – 355
IO#6 – Power voltage	360 – 365
IO#7 – GPS power	370 – 375
IO#8 – PCB temperature	380 – 385
IO#9 – Movement sensor	390 – 395
IO#10 – Odometer	400 – 405
IO#11 – Current operator code	410 – 415
IO#12 – n/a	420 – 425
IO#13 – n/a	430 – 435

9 MOUNTING RECOMMENDATIONS

9.1 Connecting Wires

- Wires should be connected while module is not plugged in.
- Wires should be fastened to the other wires or non-moving parts. Try to avoid heat emitting and moving objects near the wires.
- The connections should not be seen very clearly. If factory isolation was removed while connecting wires, it should be applied again.
- If the wires are placed in the exterior or in places where they can be damaged or exposed to heat, humidity, dirt, etc., additional isolation should be applied.
- Wires cannot be connected to the board computers or control units.

9.2 Connecting Power Source

- Be sure that after the car computer falls asleep, power is still available on chosen wire. Depending on a car, this may happen in 5 to 30 minutes period.
- When module is connected, be sure to measure voltage again if it did not decrease.
- It is recommended to connect to the main power cable in the fuse box.

9.3 Connecting Ignition Wire

- Be sure to check if it is a real ignition wire – power does not disappear while starting the engine.
- Check if this is not an ACC wire (when key is in the first position, most electronics of the vehicle are available).
- Check if power is still available when you turn off any of vehicles devices.
- Ignition is connected to the ignition relay output. As alternative, any other relay, which has power output, when ignition is on may be chosen.

9.4 Connecting Ground Wire

- Ground wire is connected to the vehicle frame or metal parts that are fixed to the frame.
- If the wire is fixed with the bolt, the loop must be connected to the end of the wire.
- For better contact scrub paint from the place where loop is connected.

9.5 Connecting Antennas

- When placing antennas avoid easily reached places.
- Avoid GPS antenna placement under metal surfaces.
- Avoid placing FM2100 device near car radio, speakers or alarm systems.
- GPS antenna must be placed so its state is as horizontal as possible (if antenna is lean more than 30 degrees, it is considered incorrect mounting).
- GPS antenna cable cannot be bent more than 80 degrees.
- GPS antenna must be placed sticker facing down




CORRECT



NOT CORRECT

It is recommended to place GPS antenna behind dashboard as close to the window as possible. A good example of GPS antenna placement is displayed in a picture below (area colored green).

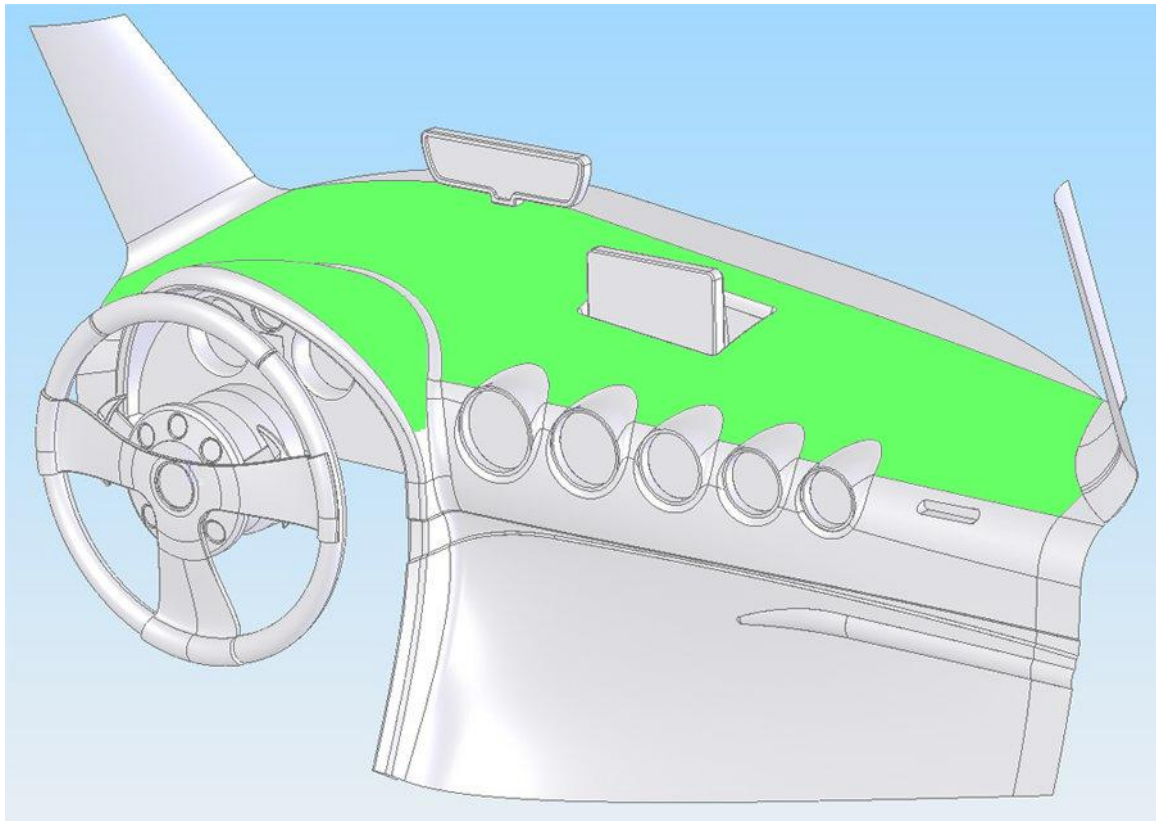

9.6 Module Installation

- Module should not be seen or easily reached.
- Module should be firmly fixed to the surface or cables.
- Module cannot be fixed to heat emitting or moving parts.
- SIM card should be inserted in the module while the connector is plugged off (while module has no power).

10 CHANGE LOG

Nr.	Date	Version	Comments
1	080410	1.0	Preliminary draft release.
2	081010	1.1	Minor revision
3	081111	1.2	Major revision, added parameter description, SMS commands, accessories description, operational basics, revised configuration chapter
4	081218	1.3	Fixed Navigate LED description, getparam, setparam command description, sleep mode description. Updated mounting recommendations.
5	090116	1.4	Fixed record storing value and socket 2x3 pinout
6	090128	1.5	Fixed output description, GPS receiver information, updated IO element list
7	090224	1.6	Added global parameter settings description
8	100525	1.7	Maximum allowed current value for digital outputs corrected.
9	111212	1.8	Minor download update